


6. CERTIFICATION

One of the following certification labels is located on top of the Certified Junction Box. The label contains all the relevant information regarding the product's identification and certification state.

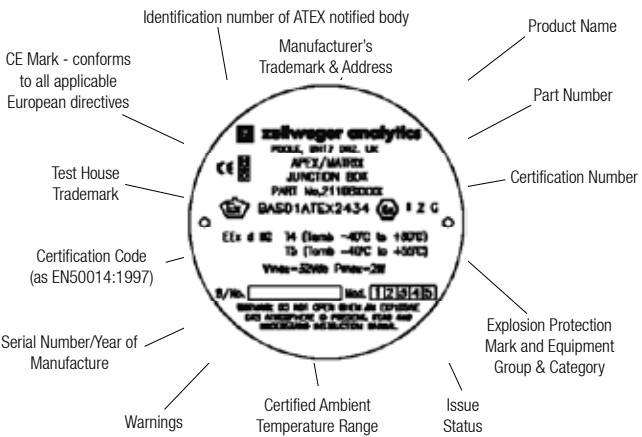

11

7. NOTES

NOTES


NOTES

12

13

14

Quick Start Guide

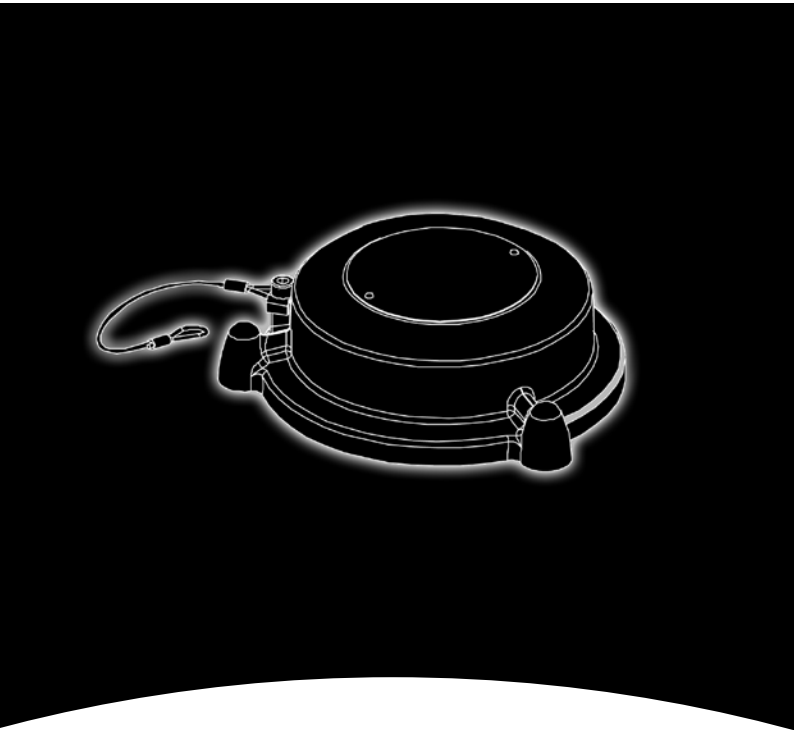

Certified Junction Box

CONTENTS

	Page
1. INTRODUCTION	2
2. SAFETY	3
3. INSTALLATION	4
3.1 BOX DIMENTIONS	5
3.2 INSTALLATION PROCEDURE	5
4. WIRING	8
5. CONFIGURATION	10
5.1 CAN TERMINATION LINK -J1	10
6. CERTIFICATION	11
7. NOTES	12

Honeywell Analytics reserve the right to change or revise the information supplied in this document without notice and without obligation to notify any person or organisation of such revision or change.

1. INTRODUCTION

The Certified Junction Box is designed for use in hazardous areas to provide a mounting point for a Certified Sensor to be located remotely from a transmitter unit (Apex for a hazardous location or Opus for a non-hazardous location).

This guide provides the information necessary to mechanically install a Certified Junction Box, fit a Certified Sensor to it, and make the necessary electrical connections.

For details about the Certified Sensor see its Quick Start Guide.

Proper consideration must be made when siting the Certified Junction Box to ensure trouble free operation throughout its life.

This guide assumes that consideration of the location and mounting of the gas detection system has previously been taken into account in accordance with the guidelines in the Apex Technical Handbook.

Associated Documentation:
Apex Quick Start Guide, MAN0601
Part No: 2110M8000
Opus Quick Start Guide, MAN0600
Part No: 2110M8001
Certified Sensor Quick Start Guide, MAN0598
Part No: 2110M8005
Apex Technical Handbook, MAN0604
Part No: 2110M8030

Refer to the relevant control system manual for connection information.

If information outside the scope of these instructions is required please contact Honeywell Analytics Ltd.

Find out more
www.honeywellanalytics.com

Contact Honeywell Analytics:

Europe, Middle East, Africa
Life Safety Distribution AG
Wilstrasse 11-U11
CH-8610 Uster
Switzerland
Tel: +41 (0)44 943 4300
Fax: +41 (0)44 943 4398
gasdetection@honeywell.com

Americas
Honeywell Analytics Distribution, Inc.
400 Sawgrass Corporate Pkwy
Suite 230
Sunrise, FL 33325
USA
Tel: +1 954 514 2700
Toll free: +1 800 538 0363
Fax: +1 954 514 2784
detectgas@honeywell.com

Asia Pacific
Honeywell Analytics Asia Pacific
#508, Kolon Science Valley (1)
187-10 Guro-Dong, Guro-Gu
Seoul, 152-050
Korea
Tel: +82 (0)2 2025 0307
Fax: +82 (0)2 2025 0329
analytics.ap@honeywell.com

Technical Services
ha.global.service@honeywell.com
www.honeywell.com

Please Note:
While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.



Issue 2 02/2002
H_MAN0607_2110M007
08/07
© 2007 Honeywell Analytics

2. SAFETY

This system is certified for and intended for use in potentially hazardous areas. Install and use the unit in accordance with current local and national regulations.



WARNINGS


- 1. This apparatus is not suitable for use in oxygen enriched atmospheres (>21%V/V). Oxygen deficient atmospheres (<10% V/V) may suppress some sensor outputs.
- 2. Operator should be fully aware of the action to be taken if the gas concentration exceeds alarm level.
- 3. Installation should consider not only the optimum siting for gas detection related to potential leak points, gas characteristics and ventilation, but also placement where the potential for mechanical damage is minimised or avoided.
- 4. Exposures above the recommended range may result in ambiguous readings and may require subsequent re-calibration of the sensor.
- 5. Do not modify or alter the construction of the unit as essential safety requirements may be invalidated.
- 6. Refer to local or national regulations related to installation and use at the site.
- 7. Input voltage must not exceed the stated maximum (32V DC) as essential safety requirements may be invalidated.
- 8. Dispose of in accordance with local disposal regulations. Materials used: Stainless steel.

3. INSTALLATION

For optimum performance the junction box should be installed in a location free from dust and direct sunlight. Additional sunshade and weather protection devices are available for sensors in harsh environments. Locations near antennae of high power radios, radar and satellites are not recommended. Environments subject to excessive mechanical vibrations are not recommended.

The installation procedure is divided into mechanical installation and electrical installation. The unit needs to be mounted to a supporting structure before electrical connections are made.

The diagram shows the main component parts of the unit.

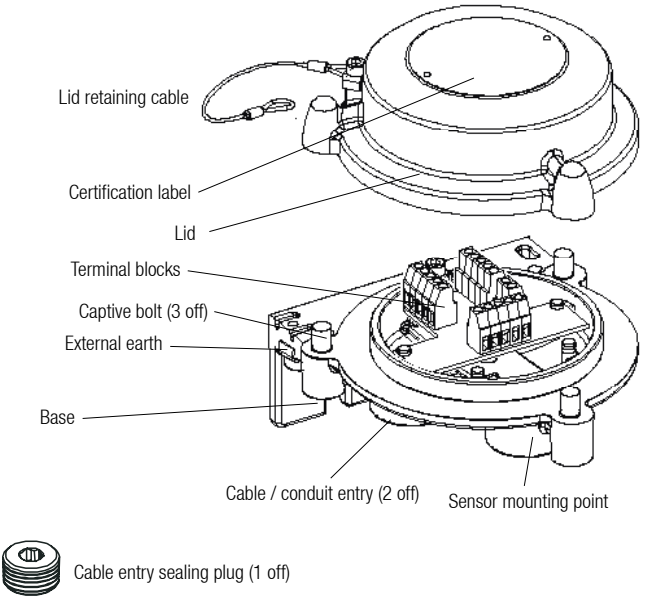

INSTALLATION

The Certified Junction Box complies with the EMC requirements of EN 50270. In order to maintain compliance with EN50270 it is essential that the product is installed correctly as detailed below. It is the responsibility of the installation design authority to ensure that the electrical installation meets appropriate standards.

- 1. The unit case should not be electrically connected to electrically noisy (dirty) metalwork or conductors. The case should be connected to a low noise (clean) earth line.
- 2. The entire length of the field cabling connected to each unit should be fully screened with the screen or conduit connected to a low noise earth.
- 3. The low noise earth line should only be connected to safety earth at a single point. Star earthing arrangements minimise earth current crosstalk. Field cabling shields should not be connected such that earth loops are produced.
- 4. The earth bonding arrangement must ensure that the maximum peak voltage between the unit case earth and any field cable conductor is less than 350V.
- 5. The use of a single, screening cable for each gas detector ensures maximum screening and minimum crosstalk. Cabling arrangements which use a single cable for connecting field devices compromise screening, increase the potential for crosstalk and prevent implementation of true star earthing.

3.1 BOX DIMENTIONS

Width:	5.50in (140mm)
Height:	3.75in (95mm)
Depth:	6.00in (150mm)
Height with sensor:	8.50in (215mm)
	9.00in (230mm) with O ₂ sensor fitted

INSTALLATION

3.2 INSTALLATION PROCEDURE

Caution: Ensure that the junction box flamepath is not damaged-during this procedure.

- 1. **Isolate all associated power supplies and ensure that they remain OFF during the installation procedure.**
- 2. **Attach the junction box to the supporting structure.**
Drill two mounting holes (68mm apart) and use the unit's mounting slots in the base with either of the following fixings:
 - Two M10 bolts.
 - A single 10mm U-bolt.

- 3. **Remove the junction box lid.**
Unscrew the three captive M8 bolts. The lid is retained by a metal retaining cable attached to the base.

- 4. **Fit and connect the field wiring.**
See Section 4 for wiring details. Use either:

Conduit - using one or both of the ¾ NPT cable entries. Ensure that a conduit sealing fitting is placed within 18" of the enclosure on conduit runs.

Cable - using any suitable flameproof cable entry device certified as Equipment to Directive 94/9/EC (ATEX).

Notes:

- 1. All unused cable entries must be sealed with a certified sealing plug (one plug is supplied fitted).
- 2. For a multi-sensor system using a network loop, both cable entries are used, one bringing the loop connections in and the other taking them out of the box. Remove the fitted certified sealing plug from the cable entry.

INSTALLATION

- 5. **Fit the Certified Sensor.**
Screw the sensor firmly into the sensor mounting point.
- 6. **Connect the sensor wiring.**
See Section 4 for wiring and termination link details.
- 7. **Refit the lid to the base.**

Cautions:

- 1. **Ensure that there is no moisture inside the junction box before fitting the lid.**
- 2. **Use only the supplied bolts, replacement with alternative bolts will invalidate certification.**


Ensure that the lid retaining cable and/or wiring are not trapped and the O-ring in the top is correctly located. Tighten the captive M8 bolts.

4. WIRING

The following information details the wiring for the unit.

Note: Isolate all associated power supplies and ensure that they remain OFF when wiring the unit.

Connect the junction box, sensor and field wiring as shown in the following diagram and the accompanying table.

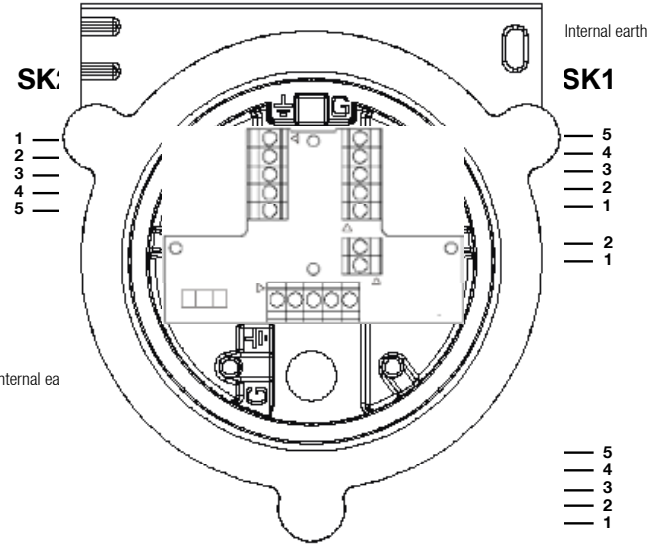

Notes:

- 1. Marked terminal numbers only used to cross-refer to table.
- 2. The junction box terminations that need to be wired depend on the overall system wiring scheme.

WIRING

Surplus wire length can be located about the base of the PCB. Ensure that the cable is not trapped by the lid when fitted.

Terminal number		Function	Colour
SK1 SK2 SK3	1	CAN_L	White
	2	CAN_H	Green
	3	+V	Red
	4	0V	Black
	5	Zener clamp screen	Green/Yellow
SK4	1	Screen	
	2	Screen	

5. CONFIGURATION

The following information specifies the unit configuration options.

5.1 CAN TERMINATION LINK - J1

- Terminated
- Unterminated (default)

Note: Put the link in the Terminated position if the junction box is at the end of a network loop.