


EC-F2-RC EC-F2 Replacement Cell



A Instructions for Installing EC-F2 Replacement Cell

- Slide ribbon cable out from under the retaining clip.
- Unplug ribbon cable and remove cell from its holder. Discard old cell.
- Install the new cell, plugging in the ribbon cable. Take care to center the plug properly on the header. Notice that the ribbon cable exits the bottom of the plug and curls back over it.
- Slide ribbon cable under the retaining clip and pull it snug to insure plug cannot slide off.
- Allow the new cell to run for a minimum of one hour, then calibrate the sensor with certified calibration gas.

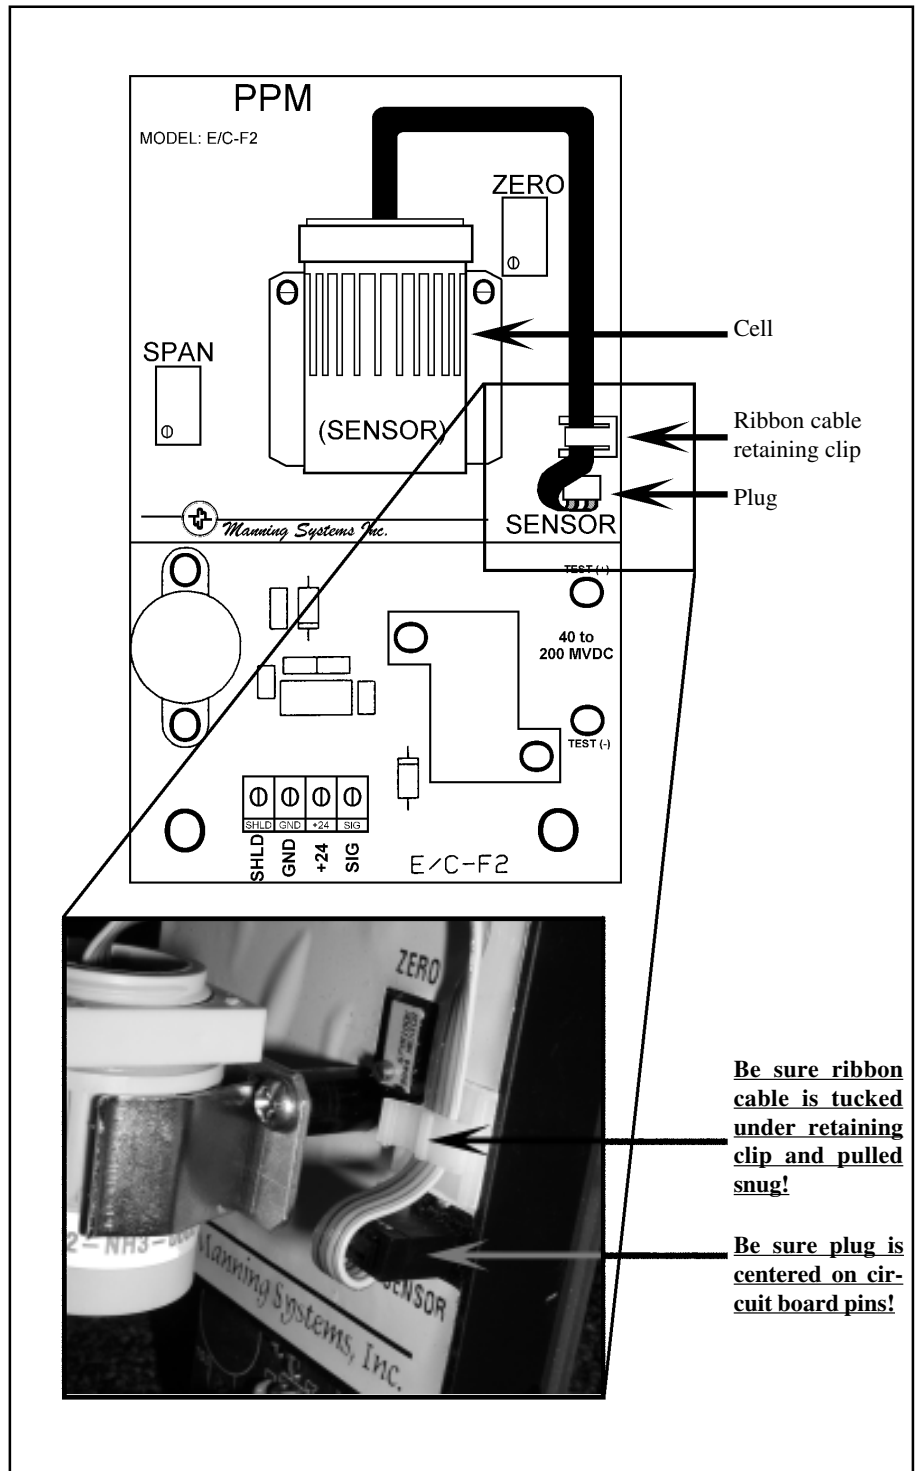

EC-F2 Replacement Cell