



Technical Manual

- [Important Information](#)
- [Contact Information](#)
- [Electrostatic Sensitive Device \(ESD\)](#)
- [Introduction](#)
- [Locate Detector](#)
- [Range](#)
- [Unpacking the Detector](#)
- [Reflector Positioning](#)
- [Field Installation](#)
- [Detector Setup](#)
- [Relay Settings](#)
- [Detector Functionality](#)
- [Detector Maintenance](#)
- [Troubleshoot](#)
- [Appendix A - Common UV Absorbing Gases](#)
- [Appendix B - Resistance Table \(ohms\)](#)
- [Appendix C - Specifications](#)
- [Appendix D - FD-HA-UVIRS Data](#)
- [Appendix E - Warranty](#)

Important Information

This manual is for informational purposes only. Although every effort has been made to ensure the correctness of the information, technical inaccuracies may occur and periodic changes may be made without notice. Honeywell Analytics assumes no responsibility for any errors contained within this manual.

If the products or procedures are used for purposes other than as described in the manual, without receiving prior confirmation of validity or suitability, Honeywell Analytics does not guarantee the results and assumes no obligation or liability.

Complete instructions have been provided for the safe service, use, installation, configuration and maintenance of this product in compliance with EN 60079-14 and EN 60079-10 for hazardous locations. Ensure this manual is read thoroughly before installation or operation.

No part of this manual may be copied, disseminated or distributed without the express written consent of Honeywell Analytics.

Honeywell Analytics products are carefully designed and manufactured from high quality components and can be expected to provide many years of trouble free service. Each product is thoroughly tested, inspected and calibrated prior to shipment. Failures can occur which are beyond the control of the manufacturer. Failures can be minimized by adhering to the operating and maintenance instructions herein. Where the absolute greatest of reliability is required, redundancy should be designed into the system.

Contact Information

Honeywell Analytics
405 Barclay Boulevard
Lincolnshire, IL 60069
Tel: +1 847 955 8200
Toll free: +1 800 538 0363
Fax: +1 847 955 8208
www.honeywellanalytics.com
detectgas@honeywell.com

Electrostatic Sensitive Device (ESD)

Electrostatic discharge (ESD) is the transfer, between bodies, of an electrostatic charge caused by direct contact or induced by an electrostatic field.

The most common cause of ESD is physical contact. Touching an object can cause a discharge of electrostatic energy—ESD! If the charge is sufficient and occurs near electronic components, it can damage or destroy those components.

In some cases, damage is instantaneous and an immediate malfunction occurs. However, symptoms are not always immediate—performance may be marginal or seemingly normal for an indefinite period of time, followed by a sudden failure.

To eliminate potential ESD damage, review the following guidelines:

- Handle boards by metal shields—taking care not to touch electronic components
- Wear grounded wrist or foot straps, or ESD shoes or heel grounders to dissipate unwanted static energy
- Prior to handling boards, dispel any charge in your body or equipment
- Ensure components are transported and stored in static safe packaging
- When returning boards, carefully package in the original carton and static protective wrapping
- Ensure ALL personnel are educated and trained in ESD Control Procedures

In general, exercise accepted and proven precautions normally observed when handling electrostatic sensitive devices.

A warning label is placed on the packaging, identifying product using electrostatic sensitive semiconductor devices.

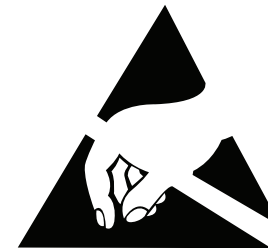


Table of Contents

Important Information	1
Contact Information.....	1
Electrostatic Sensitive Device (ESD)	1
Table of Contents.....	2
1 Introduction.....	3
1.1 Spectral Sensitivity Range.....	3
2 Locate Detector.....	3
2.1 Typical applications.....	3
2.2 Potential Ignition Sources.....	3
2.3 Potential Inhibitors	3
2.4 Absorbing Gases	3
2.4.1 Immune	4
3 Range.....	4
3.1 Field of View (as per FM and NFPA definition).....	4
3.2 Installation Considerations.....	4
4 Unpacking the Detector	5
5 Reflector Positioning.....	6
6 Field Installation	6
6.1 Wiring.....	7
6.2 Grounding.....	7
6.3 Sealing	7
6.4 Connecting	7
7 Detector Setup	9
7.1 System Sensitivity	9
7.1.1 Dip Switch Access	9
8 Relay Settings	10
8.1 Coil and Latch Status	10
8.2 Remote Reset.....	10
8.3 Final Setup	10

9 Detector Functionality	11
9.1 Detector Window/Lens	11
9.2 Start Up Procedure	11
9.2.1 System Check	11
9.3 Monitor	11
9.3.1 Condition Status—LED	11
9.3.2 Condition Status—Current Output	11
10 Detector Maintenance.....	12
10.1 Testing.....	12
10.1.1 Manual Check Procedure.....	12
10.1.2 Automatic Visual Integrity (VI) Test	12
10.1.3 Manual VI Test	12
10.2 Cleaning Window/Lens and Reflector	13
10.2.1 O-ring	13
11 Troubleshoot	14
Appendix A - Common UV Absorbing Gases	15
Appendix B - Resistance Table (ohms).....	15
Appendix C - Specifications	17
Appendix D - FD-HA-UVIRS Data.....	18
Appendix E - Warranty.....	19
How to Return Equipment for Repair	19


1 Introduction

The FD-HA-UV/IRS is a smart, stand-alone fire detector, combining sensors for both the ultra-violet and infrared spectra. The detector is designed to respond to a wide range of hydrocarbon based fires and the rugged design is ideal for both indoor and outdoor applications.

The microcontroller monitors and analyzes each sensor to identify a variety of flame conditions. Only when the defined detection criteria for both IR and UV sensors indicate a fire condition will the detector alarm.

1.1 Spectral Sensitivity Range

The FD-HA-UV/IRS fire detector responds to UV radiation wavelengths of 185 to 260 nanometres (1850 to 2600 angstroms) and IR radiation in the 4.4 micron range. Note that UV radiation reaching the earth from the sun does not extend into the sensitivity range of the detector, nor does radiation from normal artificial lighting, such as fluorescent, mercury vapour and incandescent lamps.

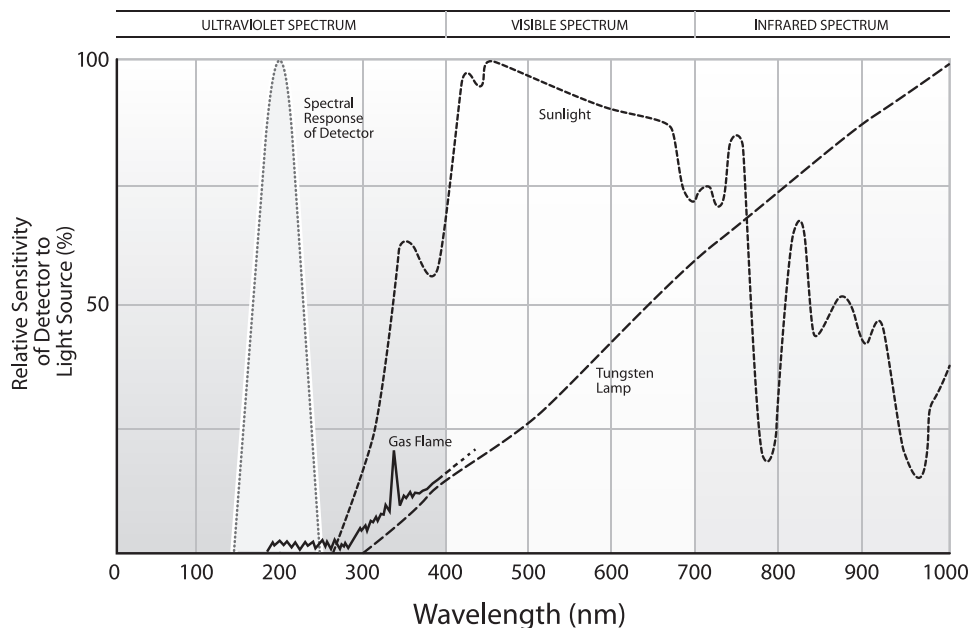

2 Locate Detector

When positioning fire detectors, consider such factors as, distance from the fire, type of fuel and temperature, as well as any environmental factors which may influence the detector's response to radiation.

2.1 Typical applications

- automotive-manufacturing and paint spray booths
- aircraft hangars (commercial and military)
- offshore platforms, refineries, pipelines and production ships
- printing industry facilities
- oil, gas and petrochemical refineries/production/storage/off loading/shipping
- various production, processing and storage facilities
- munitions handling
- warehouses (flammable liquids/toxic gases) and tank farms (floating/non-floating)
- power generation pumps, generators and unmanned stations

2.2 Potential Ignition Sources

A hydrocarbon fuel-based fire can erupt in areas where the following are found:

- Alcohol
- Acetylene
- Diesel and Hydraulic fuel
- Gasoline
- Natural Gas
- Liquefied Natural Gas (LNG)
- Paint
- Solvents
- Liquefied Petroleum Gas (LPG)
- Aviation Fuel
- Heptane/Naptha
- Propane/Methane/Butane

2.3 Potential Inhibitors

A potential inhibitor is anything located between the detector and a potential fire source which could prevent the FD-HA-UV/IRS from detecting a fire or reduce its sensitivity to fire. Possible inhibitors include but are not limited to the following:

- Solid objects such as machinery, glass or plexiglass between the detector and potential fire source
- Water, fog, rain, dirt or dust on the detector window or heavy smoke between the detector and potential fire source

2.4 Absorbing Gases

A further potential inhibitor may be the presence of UV absorbing gases or chemical vapours between the detector and source of potential fire. Such gases could impede the detector's ability to detect a UV flame source. Small concentrations of these gases may not be sufficient to obstruct the sensor

but high concentrations may impede the UV sensor. Moving the detectors closer to the probable fire source and increasing the sensitivity can, in some circumstances, overcome this issue (refer to [Appendix A - Common UV Absorbing Gases](#)).

2.4.1 Immune

The FD-HA-UV/IRS exhibits excellent immunity to many conditions/activities including but not limited to the following:

- steady hot body radiation
- artificial lighting
- sunlight (direct/reflected)
- arc welding radiation

3 Range

The practical application distance is directly related to the intensity of the ultraviolet/infrared radiation source.

Response Testing			
Fuel	Size	Distance (ft/m)	Average Response Time (Seconds)
n-Heptane	1' x 1'	140/42.7	10.6
Methanol	1' x 1'	40/12.2	9.7
Methane	36" Plume	100/30.5	5.9
Propane	16" Plume	35/10.6	4.0
Jet Fuel	1' x 1'	90/27.4	4.7
Diesel	1' x 1'	80/24.4	5.1
Lube Oil	1' x 1'	50/15.2	6.7
Ethanol	1' x 1'	60/18.3	5.7
Gasoline	1' x 1'	120/36.6	5.9

NOTE

The response time is based on zero time delay and maximum sensitivity.

Table 1. Response Testing

3.1 Field of View (as per FM and NFPA definition)

The area in front of a flame detector, where a standardized flame can be detected and which is specified by distance and angle off the central axis, is the Field of View. The referenced flame is moved to 50% of the maximum on-axis detection distance and then moved off-axis horizontally and vertically to the limit of detection. These off-axis angle limits specify Field of View.

Field of View Testing			
Fuel	Size	Horizontal Degrees	Vertical Degrees
n-Heptane	1' x 1'	120 (+60, -60)	120 (+60, -60)
Methanol	1' x 1'	120 (+60, -60)	105 (+45, -60)
Methane	36" Plume	120 (+60, -60)	95 (+35, -60)
Propane	16" Plume	110 (+55, -55)	95 (+35, -60)
Jet Fuel	1' x 1'	120 (+60, -60)	95 (+35, -60)
Diesel	1' x 1'	120 (+60, -60)	95 (+35, -60)
Lube Oil	1' x 1'	120 (+60, -60)	95 (+35, -60)
Ethanol	1' x 1'	120 (+60, -60)	100 (+40, -60)
Gasoline	1' x 1'	120 (+60, -60)	95 (+35, -60)

NOTE

Data based on Maximum Sensitivity Setting.

Table 2. Field of View Testing

3.2 Installation Considerations

The following should be considered when mounting flame detectors.

- Point detector toward where the flame is expected.
- Ensure an unobstructed view of the area to be monitored.
- Employ more than one detector to ensure the hazard is fully covered.
- Mount the detector a few feet (about 1 metre) below the ceiling so it can respond before being blocked by smoke accumulation at the ceiling.
- If dense smoke is likely to accumulate prior to flame (as in an electrical fire), supplement FD-HA-UV/IR detector(s) with other protection such as Net Safety Monitoring Airborne Particle Monitor.

- The detector should be accessible for cleaning the window/lens and reflector surfaces.
- Tilt detector downward a minimum of 10 to 20° to reduce dirt and dust accumulation which could obscure the detector's viewing window.
- Securely mount detector so as to reduce vibration as much as possible.
- When located outside, detector sensitivity can be reduced by heavy fog, rain and/or ice.
- Consider shortening the time delay settings when smoke is expected to accumulate before or during a fire (refer to [System Sensitivity](#)).
- Reduce sensitivity setting if false alarms, related to surrounding activities, occur (refer to [System Sensitivity](#)).
- When installed near or on water (such as an off shore platform), be sure to take into account the low horizon level when tilting detector downward.
- UV radiation, other than that produced by an actual fire, is referred to as "background UV". An example of a high level of background UV could be a flare stack situated outside of a building. The UV radiation produced by this flare, in conjunction with a false alarm IR source, may be detected as fire when a door to the building is opened. Windows or other reflective surfaces may also cause unusually high levels of UV radiation to enter the building from the flare. In a situation like this, the fire detection system response must be carefully checked and the sensitivity level adjusted high enough so that this "background UV" will not cause false alarms.
- UV fire detectors respond to radiation other than ultraviolet. X-rays in conjunction with a false alarm IR source can activate the detector. Since X-rays are often used in industrial inspection it may be necessary to disable the system when inspections are conducted nearby.
- For protection against line surge and extraneous transients, it is required to install detector wires in a braided flexible conduit less than 5 feet.

4 Unpacking the Detector

Carefully remove all components from the packaging. Check components against the enclosed packing list and inspect all components for obvious damage such as broken or loose parts.

If you find any components missing or damaged, notify the representative or Honeywell immediately.

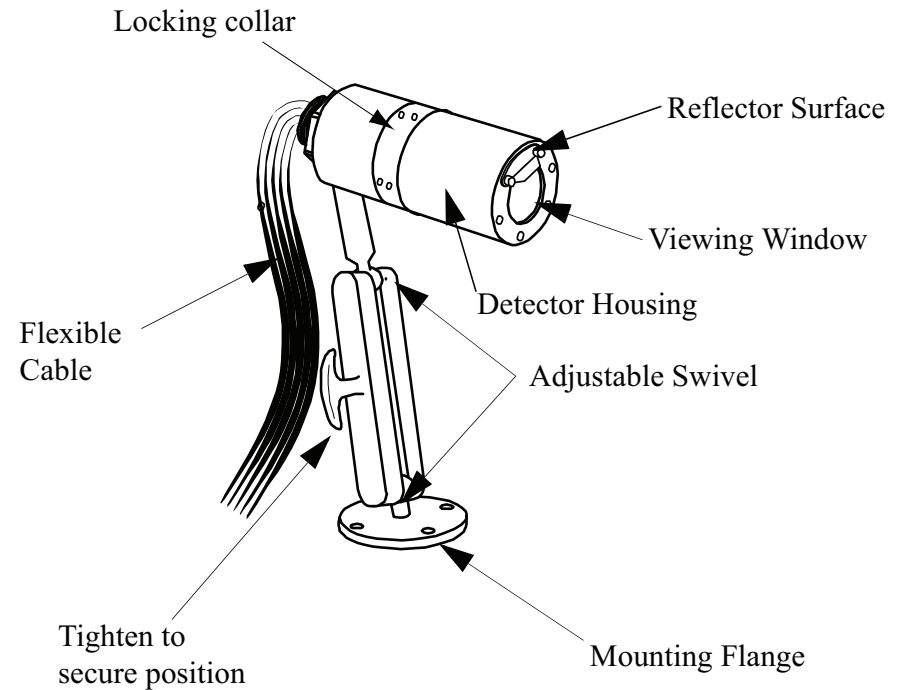


Figure 1. Detector Housing and Swivel Mount

NOTE

Units are factory sealed

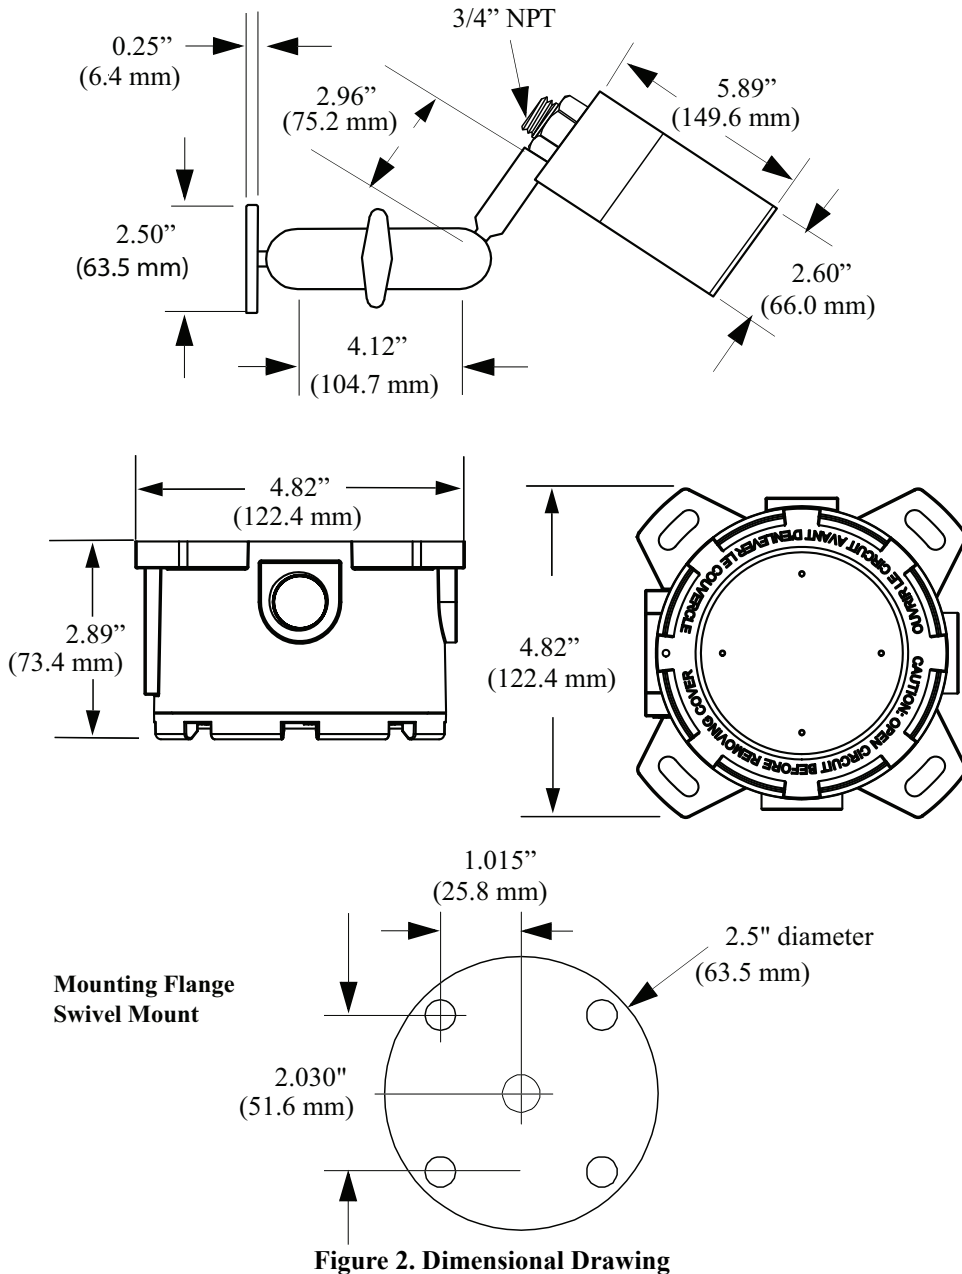


Figure 2. Dimensional Drawing

5 Reflector Positioning

Ensure the external VI reflector is placed directly over the VI Emitters (refer to [Figure 6](#) for VI source location). Also ensure the detector is mounted with the VI reflector in the top position, centred over the yellow dot.

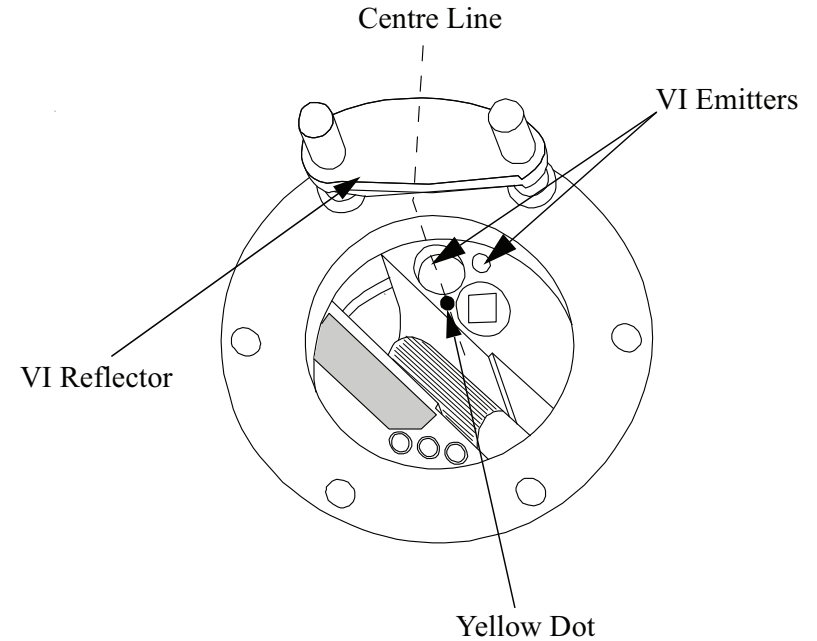


Figure 3. Position of VI Reflector

6 Field Installation

WARNING

- Wiring codes and regulations may vary. Compliance with regulations is the responsibility of the installer. Wiring must comply with applicable regulations relating to the installation of electrical equipment in a hazardous area. If in doubt, consult a qualified official before wiring the system.
- This equipment is suitable for ATEX Category 2 (Zone 1) locations and for ATEX Category 3 (Zone 2) locations.
- Equipment must be installed in compliance with EN 60079-14.
- The permanently connected cable need appropriate protection of the free end of the cable. Use an ATEX certified Junction Box.

- Do not open housing and expose electronics in a classified area . (Do not open when an explosive atmosphere may be present)
- Ensure area is de-classified prior to opening housing.
- The parts of the bushing outside the flameproof enclosure have to be protected from mechanical impact by means of Ex components (e.g.Enclosure, ATEX Thread adapters, Conduit)

6.1 Wiring

For protection against line and extraneous transients, it is required to install detector pig tail lead wires in a braided flexible conduit less than 5 feet in length to the termination box. From the termination box to the power supply the recommended detector cable is four conductor (or greater), shielded 18 AWG rated 300 V for distances up to 150 feet. When cable is installed in conduit, the conduit must not be used to support wiring to any other electrical equipment. Detectors can be located over 150 feet and up to 2000 feet, if 16 AWG shielded conductor is used. The maximum distance between the detector and the power supply is limited by the resistance of the connecting wiring, which is a function of the gauge of the wire being used. Refer to [Appendix B - Resistance Table \(ohms\)](#). The unterminated wires must be terminated in a suitable certified ATEX enclosure or fitting.

6.2 Grounding

An external ground is required. The flame detector must also be connected to an ATEX certified junction box to ensure adherence to safety conditions. If the junction box is non-metallic, the external ground must be provided by some other means.

6.3 Sealing

Water-proof and explosion-proof conduit seals are recommended to prevent the accumulation of moisture within the junction box. Seals should be located as close to the device as possible and not more than 18 inches (46 cm) away. Explosion-proof installations may require an additional seal where conduit enters a non-hazardous area. When pouring a seal, use a fibre dam to ensure proper formation of the seal. Seals should never be poured at temperatures below freezing.

The jacket and shielding of the cable should be stripped back to permit the seal to form around the individual wires. This will prevent air, gas and water leakage through the inside of the shield and into the enclosure.

It is recommended that explosion-proof drains and ATEX conduit breathers be used. Changes in temperature and barometric pressure can cause 'breathing' which allows moist air to enter conduit. Joints are seldom enough to prevent 'breathing'.

6.4 Connecting

There are two configurations of the UV/IRS available: Analog (A) and Analog with Relays (AR). Review the following figures for wiring and other settings specific to A or AR configurations.



WARNING

Prior to wiring, ensure power is disconnected. Improper wiring can cause damage to the detector.

Flame Detector Wire Coding	
Wire Color	Function
Green	Earth Ground (GND)
Blue	Manual VI (MVI)
White	Vdc (+)
Black	Com (-)
Red	4-20mA Signal Output

Table 3. Wire Color Coding—Analog

WARNING


For Analog models, if terminations are being done in a Honeywell Analytics Multi-Purpose Junction Box, refer to *Junction Box Technical Manual* for specific terminal designations.

Field Wiring	
Terminal	Function
RRst	Remote Reset
MVI	Manual VI
SIG	4-20mA Signal Output
-PWR	Com (-)
+PWR	Vdc (+)

NOTE

Terminate shield of field wiring at one end only to Earth Ground

Relay Contacts	
NO	Normally Open
NC	Normally Closed
COM	Common

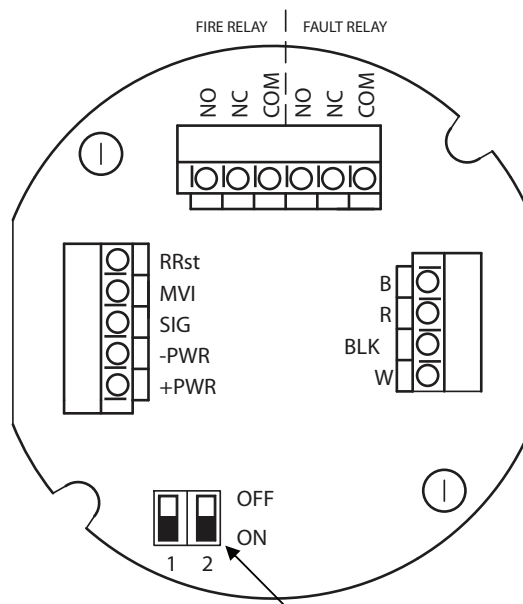

Flame Detector Wiring		
Terminal	Wire	Function
B	Blue	Manual VI / Communication
R	Red	4-20mA Signal Output
BLK	Black	Com (-)
W	White	Vdc (+)
	Green	Earth Ground (GND)

NOTE

Connect Green wire (Earth GND) to ground lug of housing.

Dip Switch (See [Relay Settings](#) for details.)

Figure 4. Junction Box Connection—Analog/Relay Board

WARNING

If the 4-20mA signal is not used, connect a jumper between the terminals for 4-20mA signal output (SIG) and -PWR (Com-) on the Field Wiring terminal block.

7 Detector Setup

7.1 System Sensitivity

The FD-HA-UV/IRS fire detector can be adjusted to various sensitivity levels by setting the detector to respond at a predetermined detector count rate. The count rate is dependent upon the intensity of the ultraviolet/infrared radiation reaching the detector, which in turn depends on the type of fuel, temperature, flame size and distance of flame from the detector.

7.1.1 Dip Switch Access

DIP Switches are used to set the detector's sensitivity and time delay settings. The DIP Switches are located on the internal Sensor module of the FD-HA-UV/IRS.

WARNING

Do not open the fire detector in a classified area. The area must be de-classified prior to opening the fire head. This detector is ATEX approved and has a locking collar that requires a 2mm Hex key to open.

Do not touch internal components other than the DIP Switches (see [Electrostatic Sensitive Device \(ESD\)](#)).

To access and select Dip switches, follow the steps below:

1. Unscrew Locking Sleeve Collar's 6 set screws and slide it off the housing.
2. Unscrew the Housing Top counter clockwise.
3. Slide a DIP Switch to the ON or OFF position. Refer to [Figure 6](#) and [Table 3](#) for instructions.

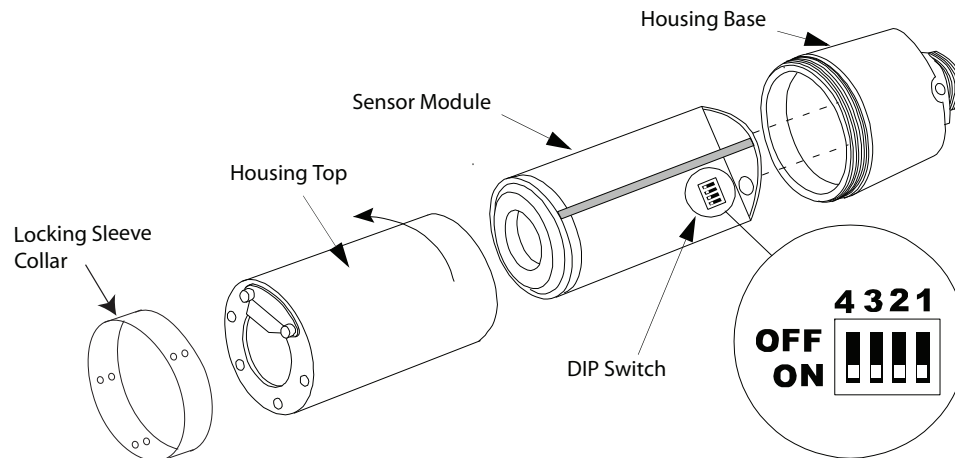


Figure 5. DIP Switch Location

7.1.1.1 Sensitivity Setting

The adjustable Sensitivity setting is used to optimize the FD-HA-UV/IRS for various installations.

When selecting a Sensitivity setting, consider the following points:

- Size of potential fire
- Distance between possible fire and detector
- Type of flammable substance to be detected
- Environmental factors

7.1.1.2 Time Delay Setting

Defining the Time Delay allows the Fire alarm signal to delay (for the specified time), before indicating an alarm. This feature can be beneficial depending upon the conditions/activities surrounding the detector.

	Sensitivity		Time Delay		
	Position 1	Position 2		Position 3	Position 4
8 CPS	ON	ON	0 secs	ON	ON
16 CPS	ON	OFF	3 secs	ON	OFF
24 CPS	OFF	ON	5 secs	OFF	ON
32 CPS	OFF	OFF	7 secs	OFF	OFF

NOTE

Default settings are set for Maximum Sensitivity of 8 Counts Per Second (CPS) and a 3 second Time Delay.

Table 4. Sensitivity and Time Delay Settings (Sensor Module)

7.1.1.3 Closing the Housing

When closing the Housing Cover, be sure that the top and bottom are screwed together tightly.

TIP

It is extremely important that the VI reflector is centred over the yellow dot. Refer to [Figure 3](#) or [Figure 6](#)

8 Relay Settings

8.1 Coil and Latch Status

The Junction Box (Relay only) has a two-position DIP Switch to define the Coil and Latch Status for the Fire Relay. Refer to [Figure 5. DIP Switch Location](#) for DIP Switch location.

NOTE

Note: The default Fire Relay is normally De-energized/Non-Latching.

The Fault Relay is factory set to normally Energized/Non-latching and cannot be modified.

Coil and Latch Status		
Fire Relay	Position 1	Position 2
De-energized / Non-latching	ON	ON
Energized / Non-latching	ON	OFF
De-energized / Latching	OFF	ON
Energized / Latching	OFF	OFF

Table 5. Relay Setting (Junction Box)

8.2 Remote Reset

If the alarm is setup for latching status, then it can be reset by momentarily connecting RRST (Remote Reset) to -PWR in the Junction Box (Relay only). Refer to [Figure 5](#) and [Table 4](#)

8.3 Final Setup

- Ensure all internal settings are complete
- Securely close Housing
- Ensure centre line of reflector is positioned over the Yellow Dot. Refer to [Figure 3](#)
- Clean detector lens
- Mount and align detector

9 Detector Functionality

9.1 Detector Window/Lens

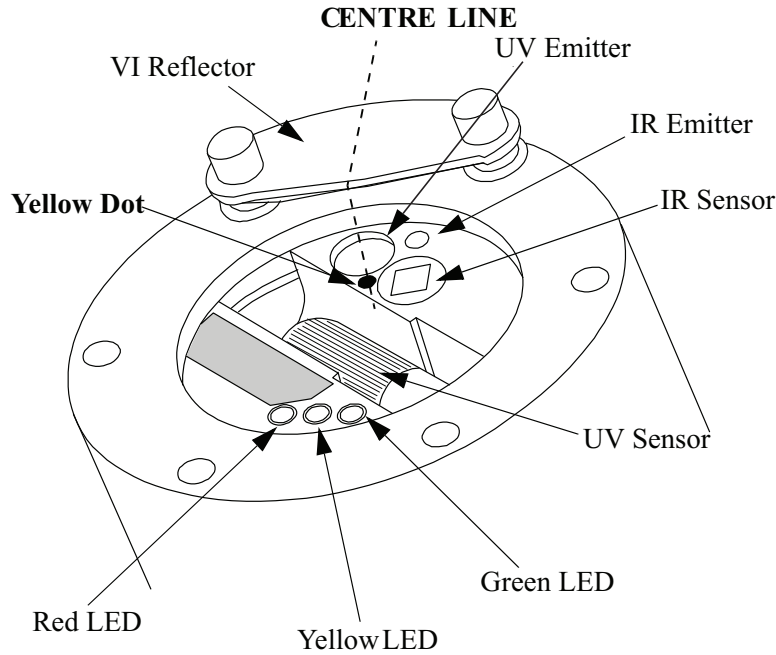


Figure 6. Detector Viewing Windows (Non-heater version shown)

NOTE

An optional heater is available to eliminate condensation on the glass window/lens.

9.2 Start Up Procedure

Once powered up, the FD-HA-UV/IRS will begin a 90 second start up routine. During this time, the current output will be 3 mA. The UV and IR source lights and the Green power LED will be on for the 90 seconds. Once the start up procedure has finished, and no faults are present, the detector will begin normal operation (current output 4 mA and Green LED will remain on).

9.2.1 System Check

Once powered up, the system should be checked. Refer to the section entitled "[Manual Check Procedure](#)" for instructions.

WARNING

When testing the system, ensure all external equipment is disabled to prevent unwanted alarm activation. Enable external equipment once testing is completed.

9.3 Monitor

There are three (3) LEDs used to indicate the status of the detector (refer to [Table 5. Relay Setting \(Junction Box\)](#)).

9.3.1 Condition Status—LED

There are three (3) LEDs used to indicate the status of the detector (refer to [Table 5. Relay Setting \(Junction Box\)](#)).

9.3.2 Condition Status—Current Output

The Current Loop status can also be measured to determine detector condition.

Test Jacks are available on the Analog board in the Honeywell Analytics Multi-Purpose Junction Box. Refer to *Junction Box Technical Manual* for details. The area must be de-classified prior to opening the Junction Box. The detector can also be monitored using the 4-20 mA Signal Output.

LED Status	Current O/P	Green LED (PWR)	Red LED (Alarm)	Yellow LED (Fault)
Internal power; Fault or system power out of range	1mA	OFF		Solid
Automatic or manual VI Test Failure	2mA	OFF	OFF	Flashing
Power up—90 secs start delay	3mA	Solid	OFF	OFF
Normal Operation	4mA	Solid	OFF	OFF
Background UV Source	6 mA	Solid	OFF	OFF
Background IR Source	8mA	Solid	OFF	OFF

Table 6. Status LEDs and Current Output

LED Status	Current O/P	Green LED (PWR)	Red LED (Alarm)	Yellow LED (Fault)
Manual VI Testing Adequate	10mA	Solid	Solid	OFF
Manual VI Testing Good	11mA	Solid	Solid	OFF
Manual VI Testing Excellent	12mA	Solid	Solid	OFF
Early Warning—Intermittent UV/IR detected	16mA	Solid	OFF	OFF
Fire Confirmed	20mA	OFF	Flashing	OFF

Table 6. Status LEDs and Current Output

10 Detector Maintenance

Although an automatic testing of the optics is done every 90 seconds, the system should be periodically checked. To maintain maximum sensitivity, the viewing window and reflector should be cleaned on a routine basis depending on the type and amount of contaminants in the area.

10.1 Testing



WARNING

When testing the system, ensure all external equipment is disabled to prevent unwanted activation.

10.1.1 Manual Check Procedure

The whole system should be checked periodically with a Honeywell Analytics FD-HA-UV/IR test lamp to make sure that the detectors are not obstructed, that the area covered by the detector has not changed and that there is no fault in the VI circuit.

1. Activate and direct the UV/IR test lamp at the detector viewing window. The current output will change with the amount of radiation being detected and the Red LED will flash (refer to [Table 5. Relay Setting \(Junction Box\)](#)).
2. Turn off the UV/IR test lamp after successful check.
3. Repeat steps 1 & 2 for all detectors in the system.

4. After all detectors have been checked, return the system to the normal operating mode and enable any external equipment.

10.1.2 Automatic Visual Integrity (VI) Test

The detector performs an automatic Visual Integrity (VI) test every 90 seconds during normal operation. If the lens is dirty, obstructed, or the reflector is dirty, obstructed or misaligned, the unit will perform a number of VI tests to confirm the presence of the obstruction.

If the obstruction is temporary, the unit will return to normal after the obstruction is removed. If the obstruction remains, the unit will drop the current output to 2 mA and the yellow LED will flash continuously indicating a misaligned reflector, failed sensor or contaminants on the window or reflector. The detector will remain in this condition until the problem is corrected. The detector window should be promptly cleaned (refer to [Cleaning Window/Lens and Reflector](#)) or the obstruction removed. Also refer to [Troubleshoot](#).

10.1.3 Manual VI Test

This test procedure can assist with maintenance planning and is often performed during commissioning. The detector has a manual VI input and the manual VI test is performed by:

- connecting Manual VI to system power by a direct connection OR
- connecting a momentary contact push button between system power and the manual VI input.
- The Honeywell Analytics Junction Box is optional and is available with or without a Manual VI Test Switch (for Analog models). Activate the Manual VI Test Switch with the magnet if the switch is available, otherwise use other available options mentioned above for manual VI Test.

NOTE

Note: The manual VI feature is optional. If not used, leave the M VI input disconnected or tied to system common.

The Manual VI test will return one of four current output responses depending upon the cleanliness of the detector window and reflector, the alignment of the reflector or the state of the sensor.

- Poor (2 mA) clean optical surfaces, align reflector
- Adequate (10 mA) clean optical surfaces, check reflector alignment
- Good (11 mA) optical surfaces moderately clean

- Excellent (12 mA) optical surfaces perfectly clean.

10.1.3.1 Test Procedure

1. Connect the manual VI test input terminal to system power by either a direct connection or manual push button. For Analog models, activate the Manual VI Test Switch if available inside the Honeywell Analytics Junction Box, with the external magnet provided. Otherwise use other Manual VI Test options previously mentioned.
2. Hold the manual VI input at this voltage for at least two seconds. The Green and Red LED will be activated for the duration of the test.
3. The detector will output a current that corresponds to the quality of the VI reading obtained (see Table 5), after it performs a VI test reading.
4. Release the manual VI test input. The detector should immediately return to normal operation.
5. If a VI fault is present, the current output will indicate 2 mA and the Yellow LED will flash.



WARNING

The detector will stay in the manual VI test mode as long as the manual VI input is held at the system power voltage. During the manual VI test all other detector functions are disabled. It is therefore imperative that after this test is performed the manual VI test input be released.

A visual integrity (VI) fault may be simulated by completely misaligning or removing the reflector, then putting the unit in MVI test mode. When this is done, the unit will go into fault indicated by the flashing yellow LED and a current output of 2 mA. Once the reflector is properly aligned (indicated in Figure 3 and Figure 7) and the unit taken out of MVI test mode, the unit will return to normal operation with a current output of 4 mA

10.2 Cleaning Window/Lens and Reflector

When cleaning the window and reflector use the cloth and the cleaning solution provided with the detector. Use only the provided cleaning solution as some cleaners can leave a residue or film that may block IR radiation.

To minimize dirt accumulation around the VI surface, a product such as Honeywell Analytics's Air Shield should be purchased to minimize particulate build up on the viewing window.



WARNING

Always bypass Alarm Output when performing maintenance tasks and ensure all external equipment are disconnected/ deactivated.

10.2.1 O-ring

The rubber o-ring on the detector housing is used to ensure the detector is watertight. The housing should be opened periodically and the o-ring inspected for breaks, cracks or dryness. To test the o-ring, remove it from the detector housing and stretch it slightly. If cracks are visible, the o-ring should be replaced. If it feels dry to the touch, a thin coating of lubricant should be applied (such as polyalphaolefin grease). When re-installing the o-ring, be sure that it is properly seated in the groove on the housing.

The o-ring must be properly installed and in good condition to prevent water from entering the detector and causing failure. The life expectancy of rubber o-rings varies depending on the type and amount of contaminants present in the area. The person who maintains the system must rely on experience and common sense to determine how frequently the rings should be inspected. A coating of lubricant should also be applied to the enclosure threads before reassembling the detector to help prevent moisture from entering.

11 Troubleshoot

The occurrence of a false alarm may be due to various factors. In order to determine the source of a false alarms, keep accurate records including time, date, weather conditions, activities in area, etc. Consult the following table for possible solutions to false alarm conditions.

False Alarm Condition				Possible Problem	Possible Solution
Current O/P	Green LED	Yellow LED	Red LED		
0 mA		Solid/off		Shorted signal Output Loss of Power Loose Wire(s)	Check wiring Check fuses (3 AMP fuse on bottom PCB) (any in-line power fuse). Check power source at unit
1 mA		Solid		Internal power fault or System power out of range	Check power supply.
2 mA		Flashing		VI (visual integrity) fault	Clean window (use Honeywell Analytics Monitoring Lens cleaner only). Check for obstruction(s) within Field of View. Check reflector position and alignment Check UV / IR source bulb. If 4-20 output is not used, jumper it to negative PWR (Com-); close current loop
6 mA	Solid			Background UV source	Confirm external UV source by covering detector window so it is blind to all radiation. If signal goes away, background UV is present. Field of View should be cleared of UV sources/activities (i.e., cracked lenses on sodium/mercury vapour bulbs, welding, grinding, flare stacks, etc.); realign detector coverage area; redefine Time Delay; reset Sensitivity setting. If signal persists, electrical wiring or detector electronics may be at fault
8 mA	Solid			Background IR source	Confirm external IR source by covering detector window so it is blind to all radiation. If signal goes away, background IR is present. Field of View should be cleared of IR sources/activities (i.e., hot bodied sources like manifolds, heaters, etc); (realign detector coverage area; redefine Time Delay; reset Sensitivity setting. If signal persists, electrical wiring or detector electronics may be at fault
10 mA	Solid		Solid	Manual VI test (adequate)	Clean all optical surfaces (use Honeywell Analytics Monitoring Lens cleaner only).
11 mA	Solid		Solid	Manual VI test (good)	No action required, optics are moderately clean.
12 mA	Solid		Solid	Manual VI test (excellent)	No action required, all optical surfaces are perfectly clean.

Table 7 Possible Problems and Solutions

Appendix A - Common UV Absorbing Gases

Since the FD-HA-UV/IR-A & FD-HA-UV/IR-AR fire detectors are designed to detect fires by responding to the ultra-violet (UV) and Infrared (IR) radiation they emit, it is very important to be aware of UV absorbing gases that may be present between the detector and the sources of potential fires. Small concentrations of these types of gases may not absorb enough UV radiation to cause a problem, but when higher concentrations of these gases are present the detectors may become blind as not enough ultra-violet radiation can reach them to activate an alarm. Moving detectors closer to the probable source of fire and increasing the sensitivity of the detector can help to overcome this problem in some cases. Following is a list of common UV absorbing gases:

Acetone	Cumene	Hydrogen Sulfide
Acrylonitrile	Cyclopentadiene	Styrene
Ethyl Acrylate	O-Dichlorobenzene	Tetrachloroethylene
Methyl Acrylate	P-Dichlorobenzene	Toluene
Ethanol	Methyl Methacrylate	Trichloroethylene
Ammonia	Alpha-Methylstyrene	Vinyl Toluene
Aniline	Naphthalene	Xylene
Benzene	Nitroethane	
1, 3 Butadiene	Nitrobenzene	
2-Butanone	Nitromethane	
Butylamine	1-Nitropropane	
Chlorobenzene	2-Nitropropane	
1-Chloro-1- Nitropropane	2-Pentanone	
Chloroprene	Phenol	

Appendix B - Resistance Table (ohms)




Distance (feet)	AWG #20	AWG #18	AWG #16	AWG #14	AWG #12	AWG #10	AWG #8
100	1.02	0.64	0.40	0.25	0.16	.010	0.06
200	2.03	1.28	0.80	0.51	0.32	0.20	0.13
300	3.05	1.92	1.20	0.76	0.48	0.30	0.19
400	4.06	2.55	1.61	1.01	0.64	0.40	0.25
500	5.08	3.20	2.01	1.26	0.79	0.50	0.31
600	6.09	3.83	2.41	1.52	0.95	0.60	0.38
700	7.11	4.47	2.81	1.77	1.11	0.70	0.44
800	8.12	5.11	3.21	2.02	1.27	0.80	0.50
900	9.14	5.75	3.61	2.27	1.43	0.90	0.57
1000	10.20	6.39	4.02	2.53	1.59	1.09	0.63
1250	12.70	7.99	5.03	3.16	1.99	1.25	0.79
1500	15.20	9.58	6.02	3.79	2.38	1.50	0.94
1750	17.80	11.20	7.03	4.42	2.78	1.75	1.10
2000	20.30	12.80	8.03	5.05	3.18	2.00	1.26
2250	22.80	14.40	9.03	5.68	3.57	2.25	1.41
2500	25.40	16.00	10.00	6.31	3.97	2.5	1.57
3000	30.50	19.20	12.00	7.58	4.76	3.00	1.88
3500	35.50	22.40	14.10	8.84	5.56	3.50	2.21
4000	40.60	25.50	16.10	10.00	6.35	4.00	2.51
4500	45.70	28.70	18.10	11.40	7.15	4.50	2.82
5000	50.10	32.00	20.10	12.60	7.94	5.00	3.14
5500	55.80	35.10	22.10	13.91	8.73	5.50	3.46
6000	61.00	38.30	24.10	15.20	9.53	6.00	3.77
6500	66.00	41.50	26.10	16.40	10.30	6.50	4.08
7000	71.10	44.70	28.10	17.70	11.10	7.00	4.40
7500	76.10	47.90	30.10	19.00	12.00	7.49	4.71

Distance (feet)	AWG #20	AWG #18	AWG #16	AWG #14	AWG #12	AWG #10	AWG #8
8000	81.20	51.10	23.10	20.20	12.70	7.99	5.03
9000	91.40	57.50	36.10	22.70	14.30	8.99	5.65
10000	102.00	63.90	40.20	25.30	15.90	9.99	6.28

NOTE

Resistance shown is one way. This figure should be doubled when determining closed-loop resistance.

Appendix C - Specifications

Models	FD-HA-UV/IRS-A (Analog)	FD-HA-UV/IRS-AR (Analog/Relay)
Operating Voltage	10 to 32 VDC	
Power Consumption	At 10 Vdc: Nominal 95 mA/ 0.95 W. Maximum 225 mA/ 2.25 W *With Heater: Nominal 200 mA/ 2.0 W. Maximum 345 mA/ 3.45 W	At 10 Vdc: Nominal 95 mA/ 0.95 W. Maximum 225 mA/ 2.25 W *With Heater: Nominal 200 mA/ 2.0 W. Maximum 335 mA/ 3.35 W
	At 24 Vdc: Nominal 45 mA/ 1.1 W. Maximum 115 mA/ 2.76 W *With Heater: Nominal 90 mA/ 2.16 W. Maximum 165 mA/ 3.96 W	At 24 Vdc: Nominal 45 mA/ 1.1 W. Maximum 115 mA/ 2.76 W *With Heater: Nominal 90 mA/ 2.16 W. Maximum 165 mA/ 3.96 W
	At 32 Vdc: Nominal 35 mA/ 1.12 W. Maximum 105 mA/ 3.36 W *With Heater: Nominal 70 mA/ 2.24 W. Maximum 145 mA/ 4.64 W	At 32 Vdc: Nominal 35 mA/ 1.12 W. Maximum 105 mA/ 3.36 W *With Heater: Nominal 70 mA/ 2.24 W. Maximum 145 mA/ 4.64 W
In Rush Current	1.5 A for 22 ms	
Current Output	0 to 20 mA - Into a max loop impedance of 800 Ohms @ 32 Vdc or 150 Ohms @ 11.0 Vdc. Non-Isolated loop supply	
Relay Output	N/A	Form C contacts rated 1A @ 30 Vdc, 0.5 A @ 125 Vac. Selectable energized/ de-energized, latching/ non-latching Fire relay. Fault relay fixed as energized/ non-latching
Field of View	120° Horizontal, 95° Vertical @ 50% of maximum on axis distance.	
Spectral Range	UV radiation over the range of 185 to 260 nanometres (1850 to 2600 angstroms); IR radiation in the 4.4micron range	
Time Delay	DIP switch selectable 0, 3, 5, 7 seconds.	
Sensitivity Settings	DIP switch selectable 8, 16, 24 or 32 counts per seconds	
Temperature & RH	FM Certified (-40°C to +75°C / -40°F to 167°F). Operational (-50°C to +75°C / -58°F to 167°F). 0 - 95% RH non condensing	
Metallurgy & IP/NEMA	Aluminum or SS316 (factory sealed housing). IP66 and NEMA 4X	
Weight (with swivel)	2.1 kg /4.5 lbs (SS316 Option @ 3.4 kg/ 7.5 lbs)	
Approvals	FM Performance certified to: Class3260, ANSI/NEMA 250, and IEC60529.	
	 CE 575  II2G, Ex d II B+H2 T5. DNV-2009-OSL-ATEX-47408X.  Class I, Div 1, Grps B, C, D, T5. Ex d IIB+H2 T5. Class I, Zone 1, Grps IIB+H2 T5; Nema 4X, IP66	

NOTE

Performance certified by FM with maximum sensitivity setting and zero second time delay

Appendix D - FD-HA-UVIRS Data

False Alarm Immunity			
Fire Alarm Source	Distance (ft/m)	Modulated	Unmodulated
Sunlight direct	-----	No Alarm	No Alarm
Sunlight indirect	-----	No Alarm	No Alarm
Arc Welder	30/9.1	No Alarm	-----
1500 Watt heater	10/3.0	No Alarm	No Alarm
40 Watt Fluorescent Lights	10/3.0	No Alarm	No Alarm
500 Watt Halogen Light	3/0.9	No Alarm	No Alarm
250 Watt Incandescent Light	3/0.9	No Alarm	No Alarm
250 Watt Sodium Vapor Lamp	10/3.0	No Alarm	No Alarm
70 Watt Sodium Vapor Lamp	10/3.0	No Alarm	No Alarm
250 Watt Metal Halide Lamp	10/3.0	No Alarm	No Alarm

Response Testing w/ Un-modulated False Alarm Stimuli Present			
False Alarm Source	False Alarm Source Distance (ft/m)	Fire Source	Fire Source Distance (ft/m)
Sunlight direct	-----	16" Propane Plume	25/7.62
Sunlight indirect	-----	16" Propane Plume	25/7.62
1500 Watt heater	10/3.0	16" Propane Plume	25/7.62
40 Watt Fluorescent Lights	10/3.0	16" Propane Plume	25/7.62
500 Watt Halogen Light	3/0.9	16" Propane Plume	25/7.62
250 Watt Incandescent Light	3/0.9	16" Propane Plume	25/7.62
250 Watt Sodium Vapor Lamp	10/3.0	16" Propane Plume	25/7.62
70 Watt Sodium Vapor Lamp	10/3.0	16" Propane Plume	25/7.62
250 Watt Metal Halide Lamp	10/3.0	16" Propane Plume	25/7.62

Response Testing w/ Modulated False Alarm Stimuli Present			
False Alarm Source	Distance (ft/m)	Fire Source	Fire Source Distance (ft/m)
Sunlight direct	-----	16" Propane Plume	25/7.62
Sunlight indirect	-----	16" Propane Plume	25/7.62
1500 Watt heater	10/3.0	16" Propane Plume	25/7.62
40 Watt Fluorescent Lights	10/3.0	16" Propane Plume	25/7.62
500 Watt Halogen Light	3/0.9	16" Propane Plume	25/7.62
250 Watt Incandescent Light	3/0.9	16" Propane Plume	25/7.62
250 Watt Sodium Vapor Lamp	10/3.0	16" Propane Plume	25/7.62
70 Watt Sodium Vapor Lamp	10/3.0	16" Propane Plume	25/7.62
250 Watt Metal Halide Lamp	10/3.0	16" Propane Plume	25/7.62

Appendix E - Warranty

Honeywell Analytics Inc., warrants its sensors against defective parts and workmanship for a period of 24 months from date of purchase; other electronic assemblies for 36 months from date of purchase.

No other warranties or liability, expressed or implied, will be honoured by Honeywell Analytics Inc.

Contact Honeywell Analytics Inc., or an authorized representative for details.

We welcome your input at Honeywell Analytics. If you have any comments please contact us at the phone/address below.

Honeywell Analytics
405 Barclay Boulevard
Lincolnshire, IL 60069
Tel: +1 847 955 8200
Toll free: +1 800 538 0363
Fax: +1 847 955 8208

www.honeywellanalytics.com
detectgas@honeywell.com

How to Return Equipment for Repair

A Material Return Authorization number is required in order to return equipment. Please contact Honeywell Analytics at (847) 955-8200 before returning equipment or consult our Service Department to possibly avoid returning equipment.

If you are required to return equipment, include the following information:

1. A Material Return Authorization number (provided over the phone to you by Honeywell Analytics).
2. A detailed description of the problem. The more specific you are regarding the problem, the quicker our Service department can determine and correct the problem.
3. A company name, contact name and telephone number.
4. A Purchase Order, from your company, authorizing repairs or request for quote.
5. Ship all equipment, prepaid to:

Honeywell Analytics
405 Barclay Boulevard
Lincolnshire, IL 60069

6. Mark all packages: RETURN for REPAIR

Waybills must state: Equipment being returned for repair

All charges to be billed to the sender.

Also, please ensure a duplicate copy of the packing slip is enclosed inside the box indicating item 1-4 along with the courier and account number for returning the goods.

All Equipment must be Shipped prepaid. Collect shipments will not be accepted.

Pack items to protect them from damage and use anti-static bags or aluminum-backed cardboard as protection from electrostatic discharge.

Find out more
www.honeywellanalytics.com

Americas

Honeywell Analytics
405 Barclay Boulevard
Lincolnshire, IL 60069
Tel: +1 847 955 8200
Toll free: +1 800 538 0363
Fax: +1 847 955 8208

detectgas@honeywell.com

Europe, Middle East, and Africa

Life Safety Distribution AG
Wilstrasse 11-U11
CH-8610 Uster
Switzerland
Tel: +41 (0)1 943 4300
Fax: +41 (0)1 943 4398

detectgas@honeywell.com

Technical Services

ha.global.service@honeywell.com

www.honeywell.com

Asia Pacific

Honeywell Analytics
#508, Kolon Science Valley (I)
187-10 Guro-Dong, Guro-Gu
Seoul, 152-050 Korea
Tel: +82 2 2025 0300
Fax: +82 2 2025 032

analytics.ap@honeywell.com

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions.

Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards and guidelines.

This publication is not intended to form the basis of a contract.

The Honeywell logo is displayed in a bold, red, sans-serif font.

MAN-0103 (03/09)

© Honeywell Analytics