

Honeywell

THE POWER OF **CONNECTED**



Installation Guide and Operating Manual

Flame Detector with Pigtail Cable

Models FS7-2173-RP, -RPC, -RP-14, -RPK, and -RPC-K

Stand-alone, Leak-proof, Digital Class I, Div. 2, Electro-optical
Semiconductor Fabrication Clean Room Specialized
Fire Detection Applications Including Wet Benches

Notices and Trademarks

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

The detector must be installed only by qualified professional personnel in accordance with local codes.

The protection provided by the gas detector may be impaired if it is used in a manner not specified by Honeywell Analytics.

ACCTTL, ALERT-1, ALARM-2, ALERT-1: ALARM 2, ALERT-1: ALARM-2, ATAG, Clean Room Sentry, COP-i, Complete Optical Path Integrity, CM1, CM1-A, DartLogic, FireLogic, Fire Signature Analysis, FireBusI, FireBusII, FirePic, FirePicII, FirePicIII, FirePix, FirePicture, FSC, Fire Sentry Corporation, Fire Sentry Corp., FSX, All FSX Nomenclature Variations (such as: FS2, FS2X, FS3, FS3X, FS4, FS4X, FS5, FS5X, FS6, FS6X, FS7, FS7X, FS8, FS8X, FS9, FS9X, FS10X, FS10X, FS11, FS11X, FS12, FS12X, FS14, FS14X, FS15, FS15X, FS16, FS16X, FS17, FS17X, FS18, FS18X, FS19, FS19X, FS20, FS20X, FS24, FS24X, FS24XN, FS26, FS26X, FS26XN), FS7-2173-2RP, FS System 7, FS System 10, FS7-2173, FS7-2173-RP, FS7-2173-2RPC-K, FS7-2173-RPC-KZ, FS2000, FS System 2000, High Speed Flame & Surveillance Detector, Multi-Spectrum QuadBand Triple IR, Multi-Spectrum TriBand, Multi-Spectrum Tri-Band, Near Band Infrared, Near Band IR, NearBand IR, QuadBand IR, Room Sentry, RS, RS2, SM2, SM3, SS, SS2, SS2X, SS2-A, SS3, SS3-A, SS3X, SS4, SS4-A, SS4X, SnapShot, SLR-BIT, SuperBus, SuperSentry, System 2000, Tri-Mode Plot, QuadBand Triple IR Plus, TriBand, Tri-Band, "FS & FSC triangle logos", WBIR, Wide Band Infrared, WideBand IR, Wide Band IR are registered trademarks of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell Analytics

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.
	REFERENCE-EXTERNAL: Identifies an additional source of information outside of this manual.
	REFERENCE-INTERNAL: Identifies an additional source of information within this manual.
	CAUTION Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.
	CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. CAUTION: Symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.



ATTENTION: Identifies information that requires special consideration.




TIP: Identifies advice or hints for the user, often in terms of performing a task.



REFERENCE-EXTERNAL: Identifies an additional source of information outside of this manual.



REFERENCE-INTERNAL: Identifies an additional source of information within this manual.

 **CAUTION** Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

CAUTION: Symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.

TABLE OF CONTENTS

	PAGE
Notices and Trademarks	1
Symbol Definitions	2
APPROVALS	4
SECTION 1: INTRODUCTION	5
1.1 Overview	5
1.1.1 Part Number Descriptions	6
1.2 Model FS7-2173-RP Electro-Optical Flame Detector	6
1.2.1 FirePic™	6
1.2.2 Event Log.....	7
SECTION 2: INSTALLATION	8
2.1 Wiring Requirements	8
2.2 Detector Installation	8
2.2.1 MOUNTING BRACKET LOCATION	8
2.2.2 DETECTOR WIRING	8
SECTION 3: DETECTOR OPERATION	9
3.1 Detector Operation.....	9
3.1.1 Power ON	9
3.1.2 Detector Fault	9
3.1.3 Detector Test	9
3.1.4 Manual Detector Test	9
SECTION 4: MAINTENANCE AND REPLACEMENT	10
4.1 Detector Faults	10
4.2 Routine Maintenance and Calibration.....	10
4.3 Enclosure Fitting Torque	11
4.4 Detector Replacement.....	11
SECTION 5: DETECTOR CABLE PIGTAIL WIRING DATA	12
Table 1: Pigtail Wiring Data.....	12
SECTION 6: ORDERING INFORMATION.....	13
INDEX	13
Limited Warranty	14
Contact Honeywell Analytics	15
Americas	15
Europe	15
Asia Pacific	15
Internet.....	15

APPROVALS

FS System 7 has been manufactured in compliance with the requirements of the ISO-9001 standard and has been approved by:

- **California State Fire Marshal (CSFM)**
- **Factory Mutual (FM)**

Restricted Materials Table for China RoHS

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB 板	X	0	0	0	0	0
感光探测器	X	0	0	0	0	0

本表格中未列出的所有部件和配件包含的有害物质都没有超过 GB/T 26572 所要求的限制。

本表格依据 SJ/T 11364 的规定编制

○ : 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26752 规定的限量要求以下。

× : 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求。

2004Y2004C_1 A0xxxx Pb PCB Pb Det 27 Apr 16

SECTION 1: INTRODUCTION

1.1 Overview

The leakproof, standalone, digital, electro-optical FS7-2173-RP flame detector, with pigtailed cable, is designed for installation within wet benches and other equipment containing combustible materials in semiconductor manufacturing clean room environment. The alarm criteria are programmed for a 13 kW polypropylene pool fire. The FS7-2173-RP detector is rated Class I, Division 2.

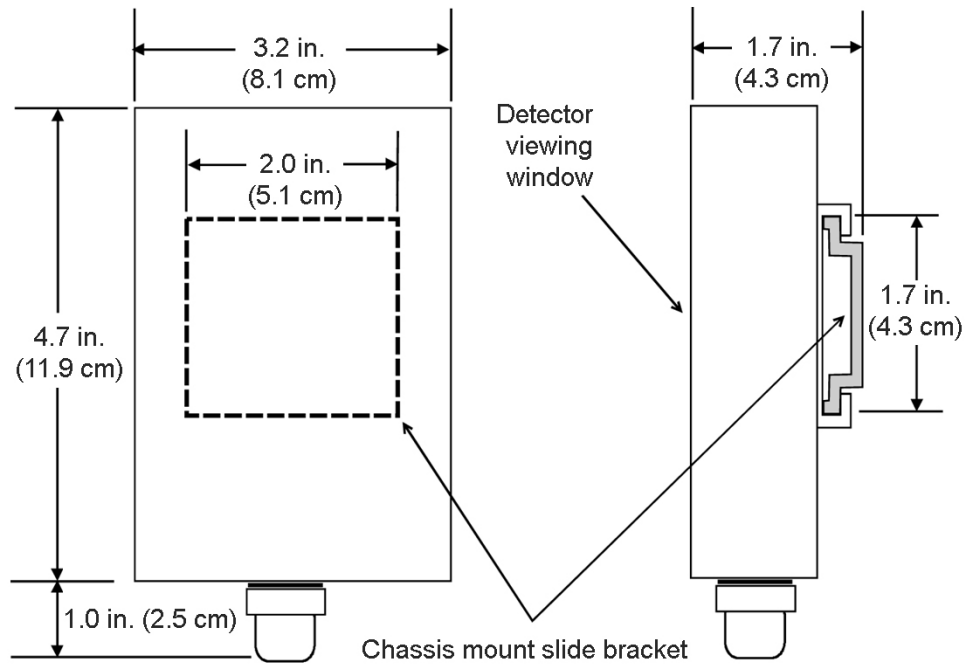


Figure 1: Detector Housing Dimensions

1.1.1 Model Number Descriptions

Model Number		Input Voltage		O-Ring		Sensitivity		Relays			Cable (ft)	Teflon Sleeve (in)
Prefix	Suffix	12 Vdc	24 Vdc	Viton	Kalrez	Standard	Low	Fault	Alert	Alarm		
FS7-2173	-RP		●	●		●		●		●	20	41
	-RP-14		●	●		●		●		●	50	300
	-RPC		●	●			●	●		●	20	41
	-RPK		●		●	●		●		●	20	41
	-RPC-K		●		●		●	●		●	20	41

1.2 Model FS7-2173-RP Electro-Optical Flame Detector

The FS7-2173-RP Detector, which contains Wide Band IR™, Near Band IR™, and Visible Band sensors, is designed to see all types of hydrocarbon and non-hydrocarbon fires, including polypropylene and IPA fires. The detector is able to see a one square foot heptane fire at half the stated sensitivity when the fire is 60 degrees off-axis. The detector’s microcomputer using digital signal processing algorithms continuously monitors its circuitry and verifies proper operation. When a fire is detected by an FS7-2173-RP Detector, its alarm relay is activated at the 13 kW polypropylene pool fire criteria.

The detector has a non-latching relay and automatically resets the fire signal relay after 5 seconds.

The FS7-2173-RP detector electro-optics electronics printed circuit board is housed in a polypropylene water- and acid-proof (leakproof) heat-sealed (IP67) enclosure.

1.2.1 FirePic™

FirePic’s digital spectral data provides information facilitating the analysis of the probable cause of the fire. This data can be used to prevent a subsequent, potentially damaging fire from occurring. Honeywell Analytics proprietary FirePic stores 8 seconds of pre-fire and actual detector sensor spectral data of the last 6 fire events in the detector’s non-volatile digital memory for analysis. FirePic provides the numerical spectral

evidence to determine the cause of the fire. The FirePic records the time and date for each fire event. The FirePic data includes a graphical display of the relative spectral intensities versus time preceding and during the fire.



NOTE: The detector must be returned to Honeywell Analytics for FirePic data to be downloaded.

1.2.2 Event Log

The FS-2173-RP Detector maintains an internal history log (event log) of up to 200 events (fires, faults, resets, etc.). The event log can be accessed using an FS7 interface unit with a minimum 486 type PC and appropriate PC software.



NOTE: The detector must be returned to Honeywell Analytics for Event Log data to be downloaded.

SECTION 2: INSTALLATION

2.1 Wiring Requirements

Input Electrical Power is 24 VDC AT 55 mA nominal.

Refer to section 5, table 1 for wiring details.

2.2 Detector Installation

2.2.1 MOUNTING BRACKET LOCATION

- a. The detector has a 120-degree conical field-of-view (viewing angle). It is recommended the detector be positioned with the primary fire threat location along in the axis of the detector's field-of-view. Since the detector must "see" the fire in order to detect it, it should be installed in locations, such as corners and ceilings, to avoid line-of-sight blockage.
- b. Choose a fastening method, which will secure the detector solidly to the type of material at the enclosure location. For example, custom holes may be drilled in the mounting bracket and attached with screws, rivets, etc. If the mounting surface is polypropylene, heat welding may be used to secure the bracket.
- c. Slide the enclosure onto the mounting bracket until it locks into place.

2.2.2. DETECTOR WIRING

Connect each "pigtail" wire lead to the appropriate connection of external equipment.



CAUTION: Follow static protection procedures while handling the pigtail wiring of the Detector. The proper use of a wrist strap connected to earth ground will help prevent product damage.

SECTION 3: DETECTOR OPERATION

3.1 Detector Operation

3.1.1 Power ON

In power on normal detector operation, the detector is ready to detect fires, and report faults and its LED blinks once every 10 seconds.

3.1.2 Detector Fault

During a fault condition, the detector will:

- Blink its LED every 10 seconds with a fault code,
- Record the event in its fault event history file, and
- De-energize its fault relay (opening the relay contacts.)

Where possible, the fault condition is self-resetting; i.e., if the action causing the fault is remedied, the controller module will stop reporting a fault.

3.1.3 Detector Test

The detector automatically performs an internal self-test every ten minutes to check the integrity of operation. The detector is still fully functional and able to alert/alarm to a fire or fault while self-tests are occurring.

3.1.4 Manual Detector Test

Tests the detector “end-to-end” by activating it with a Honeywell Analytics remote handheld test lamp.

Note: Use Honeywell Analytics model FT-S7 or FS-746-B test lamp to test the FS7-2173-RP detector.



WARNING: Disable responses to detector outputs to avoid activating external alarms and/or suppression systems during manual testing.

SECTION 4: MAINTENANCE AND REPLACEMENT

4.1 Detector Faults

Fault CONDITION	ACTION
Power Fault	LED is OFF. No power is available at the detector. Check wiring for broken or crimped cables or loose terminations.
Self-Test Fault	The detector LED blinks 3 times every 10 seconds. Flame detector "Sensor Integrity" test failure. No user serviceable repair. Return to Honeywell Analytics for service.
Leak Detection Fault	The detector LED blinks 4 times every 10 seconds. The fault occurs due to a leak within the detector housing. Return the detector to Honeywell Analytics for service.
High Temperature Fault	The detector LED blinks 5 times every 10 seconds. Return the detector to Honeywell Analytics for service.
Memory Corruption	The detector LED blinks 6 times every 10 seconds. Return the detector to Honeywell Analytics for service.

4.2 Routine Maintenance and Calibration

The detector has no calibration requirements or field calibration options. Test it according to a periodic schedule. When operated in a clean room environment, the window viewing area is expected to remain clean. This would be verified as part of a routine test with a Honeywell Analytics test lamp handheld tester. If cleaning is required, the detector's viewing area may be cleaned with isopropyl alcohol.

4.3 Enclosure Fitting Torque

The proper torque of the housing Teflon tube fitting maintains the enclosure leakproof integrity. If the fitting components become loose for any reason, re-torque according to parameters shown in Figure 2.

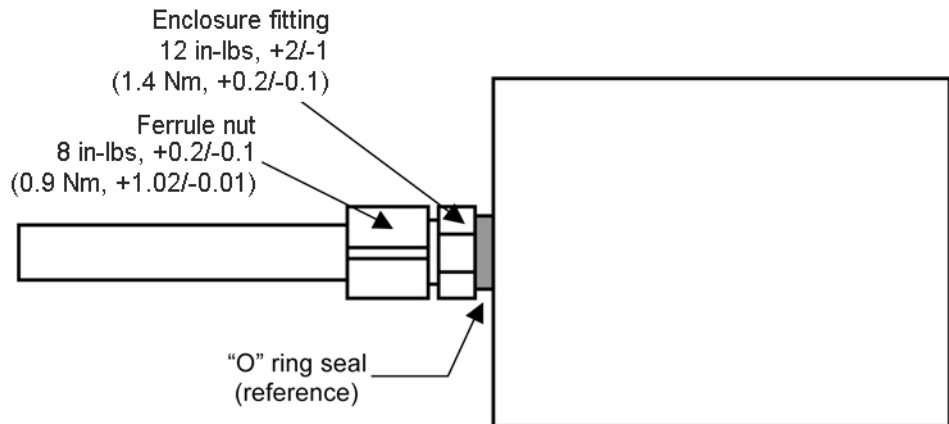


Figure 2

4.4 Detector Replacement

1. Disable 24 VDC power to the detector.
2. Disconnect the detector's pigtailed wires.
3. Make sure there is enough cable slack for removing the detector.
4. Carefully slide the detector off the mounting bracket.
5. Install another detector in reverse order.

A detector should be packaged in static protective material for return. If this material is not available, carefully wrap the detector and harness in aluminum foil. Before returning it to the factory, contact Honeywell Analytics Customer Service for a required Return Material Authorization (RMA).



There are NO user serviceable parts in a detector. ANY evidence of tampering, prying opening the FS7-2173-RP detector housing or attempted repairs of any kind by non-factory personnel will void all warranties.

SECTION 5: DETECTOR CABLE PIGTAIL WIRING DATA

Table 1: Pigtail Wiring Data

Wire Number	Wire Color	Description
1	BLACK	24 Volt Return (-) Supply
2	RED	+ 24 Volt DC Supply
9	GREEN	FireBus RS-485 Digital Data Signal a
0	WHITE	FireBus RS-485 Digital Data Signal b
3	GRAY	Fault Relay Terminal A, Contact to B during Normal Operation
4	PURPLE	Fault Relay Terminal B, Contact to A during Normal Operation
7	BROWN	Fire ALARM Relay Terminal A
8	BLUE	Fire ALARM Relay Terminal B
5	YELLOW	Fire ALARM Relay Terminal A, loop through Detector
6	ORANGE	Fire ALARM Relay Terminal B, loop through Detector
N/A	Non Insulated wire	Cable shield – To be terminated at the Fire Alarm Panel Chassis Ground.



NOTE: The Fire alarm relay loop through terminal contacts may be used for end-of-line (EOL) resistors for supervision of contact wiring.

SECTION 6: ORDERING INFORMATION

Part Number	Description
FS7-2173-RP	FS7-2173-RP Flame Detector: The standalone FS7 electro-optical flame detector for wet benches with Standard Wide Band Infrared Spectral Sensor Array; operating temperature range is 0 to +70°C (+32°F to +158°F). The standard cable length is 20 feet with a 41-inch Teflon sleeve, fault and alarm relays, and a Viton O-ring.
FS7-2173-RP-14	FS7-2173-RP-14 Flame Detector: The standalone FS7 electro-optical flame detector for wet benches with Standard Wide Band Infrared Spectral Sensor Array; operating temperature range is 0 to +70°C (+32°F to +158°F). The cable length is 50 feet with a 300-inch (25 feet) Teflon sleeve, fault and alarm relays, and a Viton O-ring.
FS7-2173-RP-K	FS7-2173-RP-K Flame Detector: The standalone FS7 electro-optical flame detector for wet benches with Standard Wide Band Infrared Spectral Sensor Array; operating temperature range is 0 to +70°C (+32°F to +158°F). The standard cable length is 20 feet with a 41-inch Teflon sleeve, fault and alarm relays, and a Kalrez O-ring.
FS7-2173-RPC	FS7-2173-RPC Flame Detector: The standalone FS7 electro-optical flame detector for wet benches with a Low Sensitivity Wide Band Infrared Spectral Sensor Array; operating temperature range is 0 to +70°C (+32°F to +158°F). The standard cable length is 20 feet with a 41-inch Teflon sleeve, fault and alarm relays, and a Viton O-ring.
FS7-2173-RPC-K	FS7-2173-RPC-K Flame Detector: The standalone FS7 electro-optical flame detector for wet benches with a Low Sensitivity Wide Band Infrared Spectral Sensor Array; operating temperature range is 0 to +70°C (+32°F to +158°F). The standard cable length is 20 feet with a 41-inch Teflon sleeve, fault and alarm relays, and a Kalrez O-ring.
FS-746-B	FS7-2173 Detector Long-Range Test Lamp: Self-contained, handheld, battery-operated test lamp to verify model FS7-2173-RP detector operation “end-to-end” without test fires. Use to test FS7 detectors at a distance of up to 10 feet.
FT-S7	FS7-2173 Detector Short Range Test Lamp: Small, handheld self-contained, battery-operated detector test lamp to verify model FS7-2173-RP detector operation “end-to-end” without test fires. An AC/DC wall transformer is included for recharging the battery. Use to test FS7 detectors at a distance of up to 2 feet.

INDEX

Calibration	9	Maintenance	9
Detector		Normal Operation	8
Internal problem.....	10	Ratings.....	5
Detector Test	8	Relay	
Fault	8	Fault	8
Relay	8	Replacement	
FirePic	5	Detector	10
LED		Through the Lens Fault.....	9
Faults	8	Troubleshooting.....	9

Limited Warranty

Honeywell Analytics warrants its Products against defects in material and workmanship under normal use and service for a period of two years from the date of shipment as described herein. Honeywell Analytics, at its option, will repair or replace, at no charge, such products found to be defective during the warranty period provided that they are returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All Replaced parts of Products shall become the property of Honeywell Analytics. This express limited warranty is extended by Honeywell Analytics to the original purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Products manufactured by Honeywell Analytics. Honeywell Analytics assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of Honeywell Analytics. Honeywell Analytics does not warrant the installation, maintenance or service of its Products. Honeywell Analytics is not responsible in any way for ancillary equipment not furnished by Honeywell Analytics, which is attached to or used in connection with its Product(s), or for operation of the Product(s) with ancillary equipment and all such equipment if expressly excluded from this warranty. This warranty sets forth the full extent of Honeywell Analytics' responsibility regarding the Products' repair or replacement at Honeywell Analytics' options, is the exclusive remedy.

This Warranty is given in lieu of all other Express Warranties, Implied Warranties, including without limitation, Implied Warranties of Merchantability and fitness for a particular purpose, are limited to the duration of this Limited Warranty. In no other event shall Honeywell Analytics be liable for damages in excess of the purchased price of the product(s), for any loss of use, loss of time, inconvenience, commercial loss, lost profits or savings or other incidental, special or consequential damages arising out of or in connection with the use or inability to use such product, to the full extent such may be disclaimed by law.

THIS WARRANTY DOES NOT COVER:

1. Defects or damage resulting from use of the Product(s) in other than its normal and customary manner.
2. Defects or damage from misuse, accident, or neglect.
3. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification or adjustment.
4. Product(s) subject to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the audition of the product of non-Honeywell Analytics supplied equipment) which adversely affect performance of the Product(s) to interfere with Honeywell Analytics' normal warranty inspection and testing of the Product(s) to verify any warranty claim.
5. Product(s) that have had the serial number removed or made illegible.
6. Freight cost to the repair facility.
7. A Product which due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with Honeywell Analytics' specifications.
8. Scratches or other cosmetic damage to Product surfaces that do not affect the operation of the Product.
9. Normal and customary wear and tear.

Laws in the United States and other countries preserve for Honeywell Analytics certain exclusive rights for copyrighted Honeywell Analytics software/firmware, such as the exclusive rights to reproduce in copies and distribute copies of such Honeywell Analytics software/firmware. Honeywell Analytics software/firmware may be used only in the Product(s) in which the software/firmware was originally embodied and such software/firmware in such Product(s) may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Honeywell Analytics software/firmware or exercise or rights in such Honeywell Analytics software/firmware is permitted. No license is granted by implication, estoppel or otherwise under Honeywell Analytics patent rights or copyrights.

Contact Honeywell Analytics

Americas

Honeywell Analytics Inc.
405 Barclay Blvd.
Lincolnshire, Illinois
USA 60069
1-847-955-8210
1-800-538-0363
detectgas@honeywell.com

Europe

Life Safety Distribution AG
Javastrasse 2
8604 Hegnau
Switzerland
+41 (0)44 943 4300
+41 (0)44 943 4380
gasdetection@honeywell.com

Asia Pacific

Honeywell Industrial Safety
7F SangAm IT Tower
434 Worldcup Buk-ro, Mapo-gu
Seoul 03922
Korea
+82 (0) 2 6909 0300
VOIP: +8 5401 0321
analytics.ap@honeywell.com

Internet

www.honeywell.com
www.honeywellanalytics.com

Honeywell

THE POWER OF **CONNECTED**

1998M0958

Revision B

May 2017

© 2017 Honeywell International Inc.